
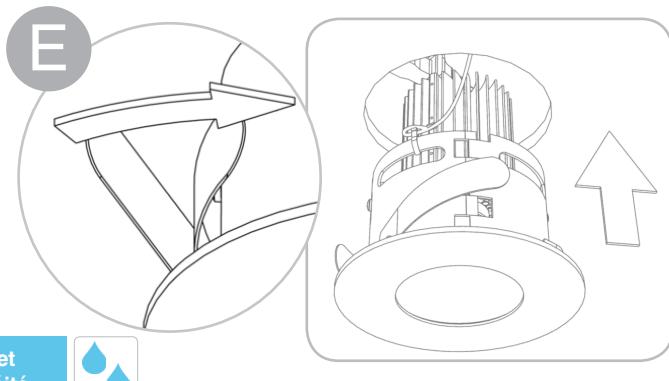
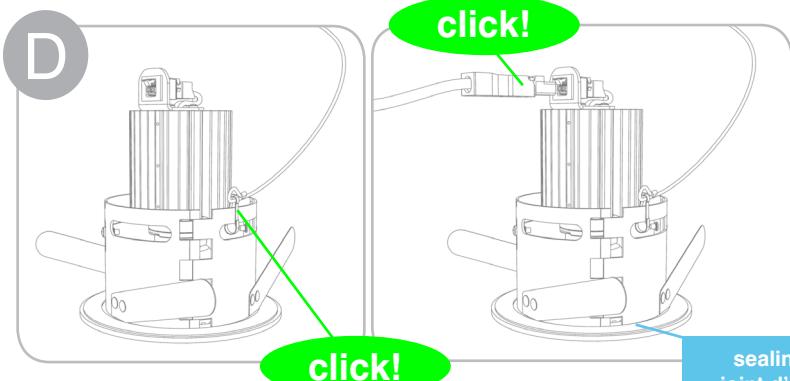
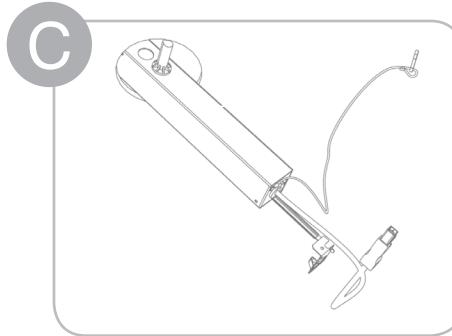
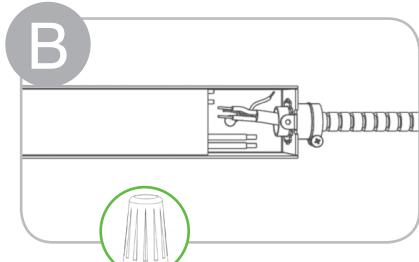


see reverse for template

voir au verso pour gabarit

## LETO 4

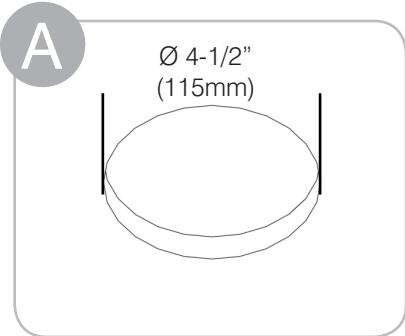

**Installation on uneven surface will prevent the sealing gasket from working properly**  
**la surface d'installation doit être lisse afin d'assurer que le joint d'étanchéité soit efficace**



### read and follow these instructions before installing or maintaining this product

- make sure this product is NOT on the same circuit as inductive loads, (e.g. fluorescent bulbs, discharge bulbs, ventilation fans, etc...)
- allow air to flow freely around the fixture
- do not install insulation within 3" (76 mm) of the fixture**
- ceiling thickness must be between 1/8" & 1"(3mm & 25mm)
- Do not switch on line voltage until all wiring is complete
- Incorrect wiring will result in irreparable damage to LED and power supply
- This product should only be installed by a licensed electrician

### veuillez lire et suivre ces instructions avant l'installation ou l'entretien de ce produit

- Assurer vous que des charges inductives ne se retrouvent pas sur le même circuit que ce produit, (i.e. fluorescent, ampoules à décharge, ventilateurs, etc...)
- Permettre à l'air de circuler librement autour du luminaire
- Ne pas installer d'isolant à moins de 3" (76mm) du luminaire**
- L'épaisseur du plafond doit être comprise entre 1/8" & 1" (3mm & 25mm)
- Compléter les branchements avant de mettre sous tension
- Un branchement incorrect créerait des dommages irréparables à l'alimentation et au DEL
- Ce produit devrait être uniquement installé par un électricien qualifié


### switch off the line voltage supply

- cut a hole according to dimension
- connect the driver to the line voltage and ground to enclosure
- insert driver box in opening
- secure the fixture with the seismic tether  
plug the fixture to the driver
- compress the three (3) springs inward  
push the fixture in place

### mettre le courant hors tension

- découper un trou selon les dimensions données
- relier l'alimentation du DEL au secteur et le fil de mise à la terre au boîtier
- insérer l'alimentation et déposer sur le plafond
- fixer le câble de sécurité au luminaire  
brancher le luminaire à l'alimentation
- replier les trois (3) ressorts et insérer le luminaire en place

3" (76mm)  
MINIMUM

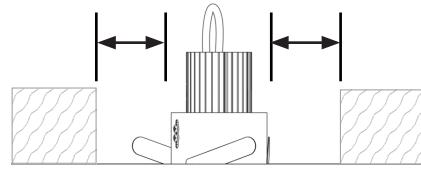

### WARRANTY

- This product must be installed in accordance with all applicable installation codes and ordinance
- Limited two (2) years warranty
- Warranty is void in the eventuality of unauthorized modifications and/or improper use

### GARANTIE


- Ce produit doit être installé conformément au code d'installation et autres normes applicables
- Garantie limitée de deux (2) ans
- La garantie est non valide advenant une modification non autorisée ou un usage non approprié

[www.sensolighting.com](http://www.sensolighting.com)  
[info@sensolighting.com](mailto:info@sensolighting.com)



**SENSO**  
Lighting

512 Manitou Road SE, Calgary, Alberta T2G 4C4

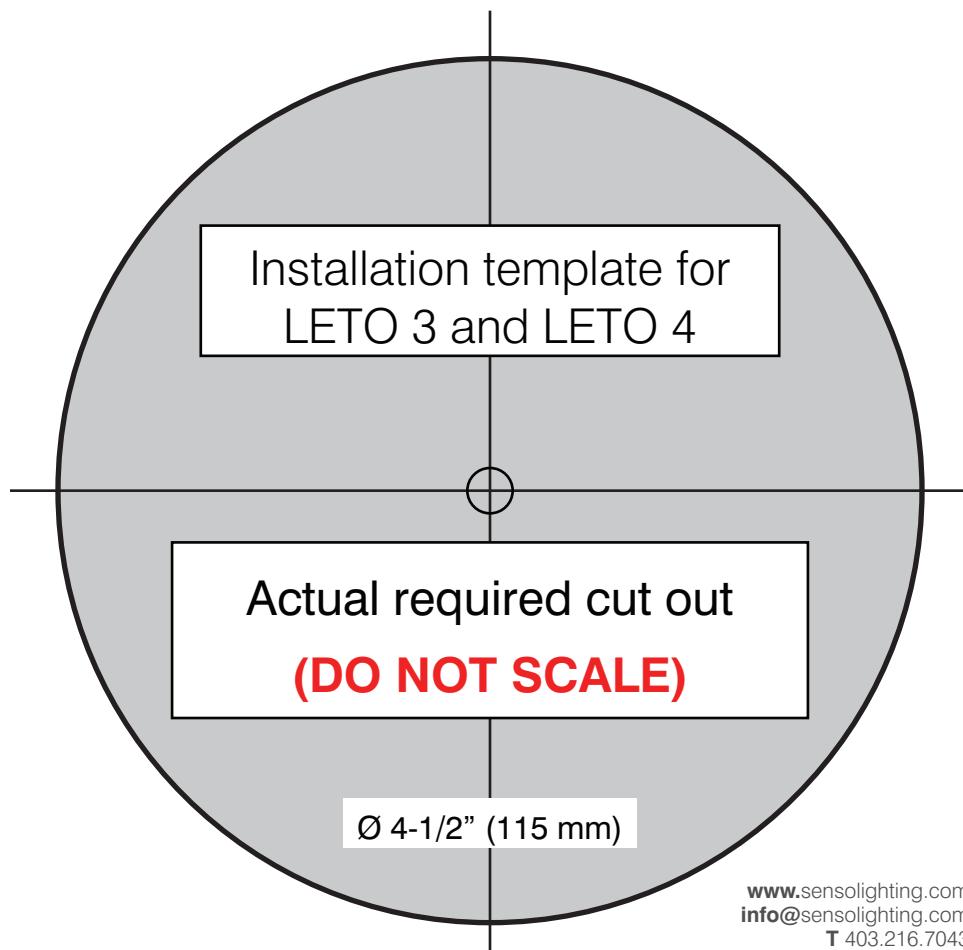

A circular diagram representing an installation template. It features a large outer circle with a smaller inner circle at its center. A vertical line passes through the center, and a horizontal line intersects it at right angles, forming a crosshair. Two rectangular boxes are positioned within the circle: one in the upper half and one in the lower half. The top box contains the text "Installation template for LETO 3 and LETO 4". The bottom box contains the text "Actual required cut out" on top and "(DO NOT SCALE)" in red text below it. The bottom of the circle contains the text "Ø 4-1/2" (115 mm)".

Installation template for  
LETO 3 and LETO 4

Actual required cut out  
**(DO NOT SCALE)**

Ø 4-1/2" (115 mm)